




EcoFurn PicNic Bench 120 - ASSEMBLY AND USE



Check the content of the box first. Tools are not necessary.

A. Outward bars (with 3 holes at each end) 4pcs B. Right legs 2pcs
 C. Left legs 2pcs D. Upper crossbars (shorter) 2pcs
 E. Lower crossbars (longer) 2pcs F. Exertion ropes 2pcs (longer)
 G. Exertion sticks 2pcs H. Fixing ropes 2pcs (shorter)
 I. Bars 4pcs (with 1 hole at each end) J. Cubes 10pcs
 K. Wooden pins 60 mm 8pcs L. Wooden pins 40 mm 16pcs

Image 1

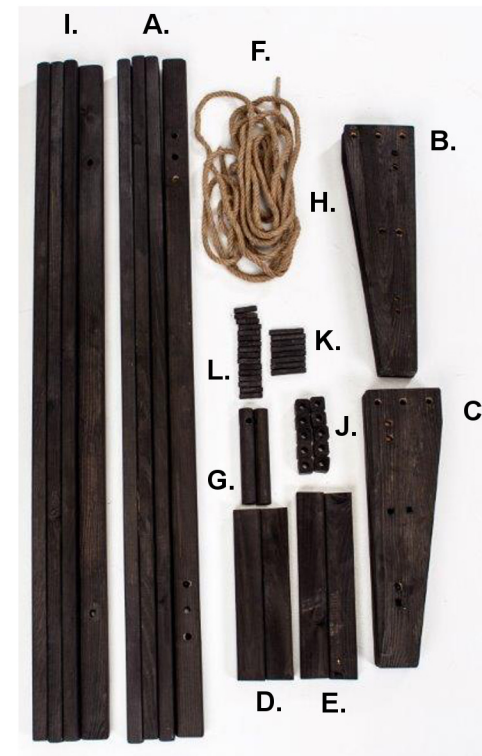

Insert 60 mm wooden pins (K) through the legs (B&C). If necessary, hammer with caution.

Image 2



Insert 40 mm wooden pins (L) into crosspeg holes (half way in). If necessary, hammer with caution.


Image 3

NB! Do not hammer 40 mm pins into legs, it may cause breakage of the leg!



Adjust crossbars (D&E) between legs. Do not use excessive force. Crossbars edges are made with 2.5° angle, shorter side must be upper. Shorter crossbar (D) must be above a and longer crossbar (E) below.

Image 4

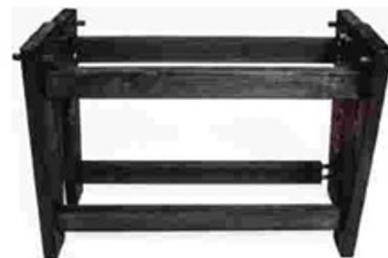

Insert exertion ropes (F) between legs, add exertion sticks (G) and tie knots.

Image 5

NB! Make sure that the straight sides of the legs are outwards!



Strain exertion ropes with the exertion sticks.

Image 6



Adjust outward bars (A).

Image 7



Adjust bars (I) and cubes (J) using fixing ropes (H).

Finally, make tight knots in the ends of the fixing ropes and tighten the exertion ropes firmly.

Image 8



Your PicNic Bench is now ready to use. **IMPORTANT! Tighten the ropes daily.**

If the Bench is not stable enough, check that all the pieces are put together correctly and the ropes are tightened properly. When everything is according to instructions, You can make Your Bench more stable by watering the ropes.

Remember to re-oil wooden parts with good quality wood oil regularly, depending on the weather and moisture conditions. *Exception: wood products made of larch do not need oiling.*

Read more: www.ecofurn.eu